


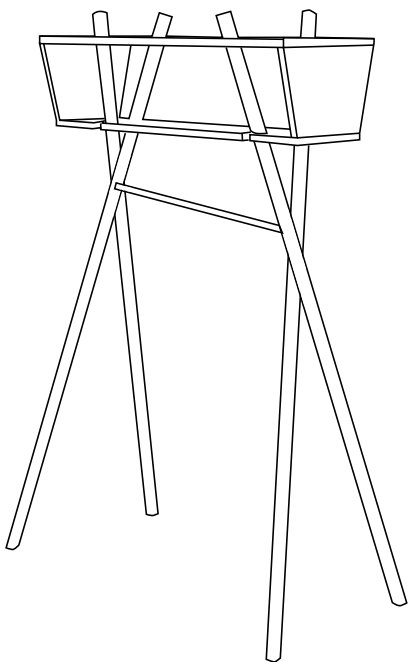

shelf
triangle
DESIGNER Hong





OpenDesign

www.downloadopendesign.com

MATERIALS




Bamboo

(Φ35 mm, 1600mm) X4
(Φ30mm, 600mm) X4
(Φ15mm, 60mm) X4



Screws

Φ6X40mmX8



plybamboo


1200×500×16mm

TOOLS




Electrodrill

Φ4.5 / 6mm

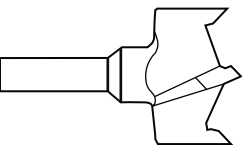

Reamer

Φ35




Hexagon Screwdriver




Panel Saw

SISE

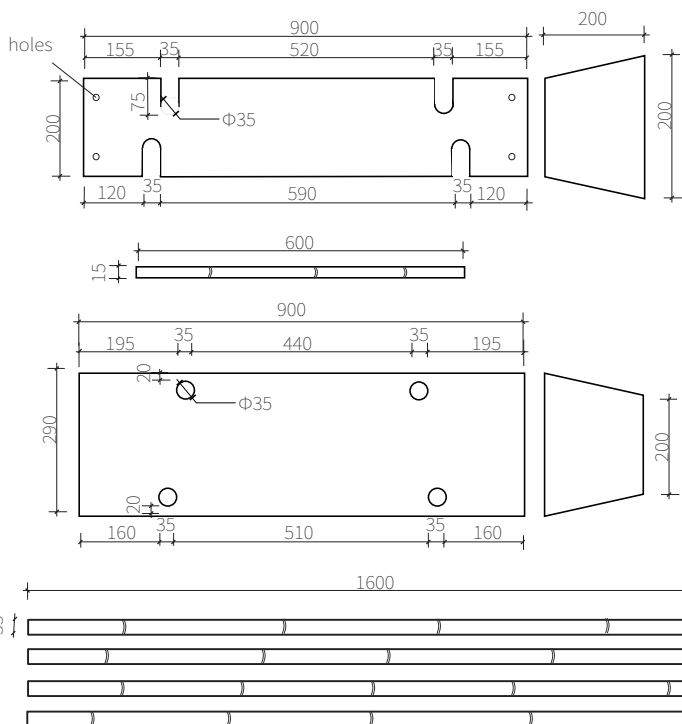


COMPONENT PIECES


STEP 1

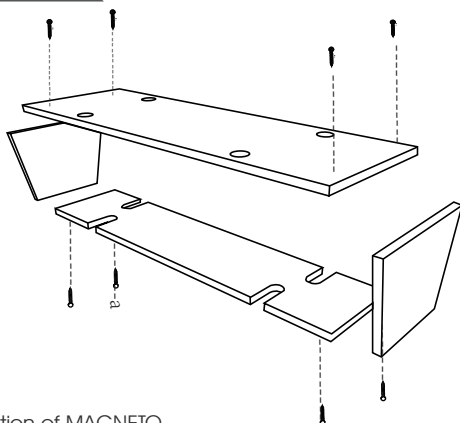

STEP 2

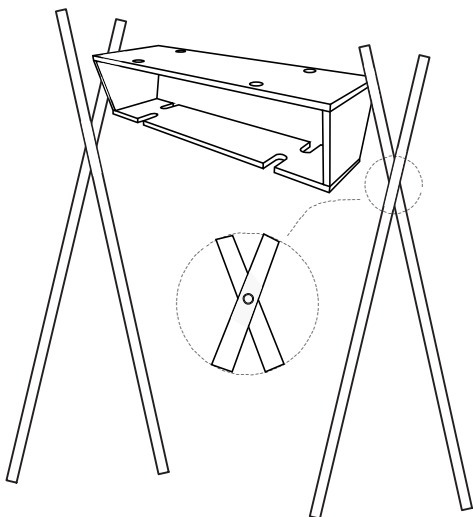

STEP 3

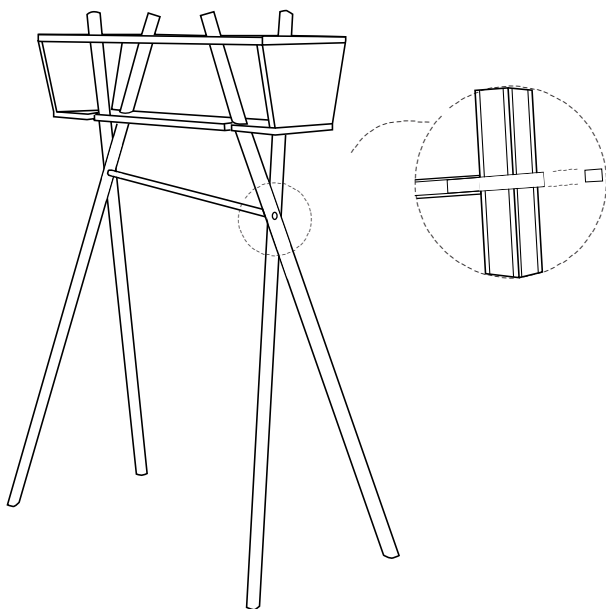



CONGRATULATION!

Now you got your own lamp

If you meet some problems when building this lamp
please contact us
312790773@qq.com



OpenDesign
www.downloadopendesign.com